


iFlight Borg Mini H7 RX Wiring diagram

Parameters:

FC Specifications:
Input voltage: 4-8S Support LiHV battery
Dimensions: 56*27mm1mm
Mount pattern: 20*20mm
Weight: 7.7g
MCU: STM32H743V6H6
Gyro: ICM42688
OSD: AT7456E (LGA)
Blackbox: 32MB
Motor outputs: 4
IDC: Supported
BEC: 5V 2.5A, 12V 2A (12V with VTX switch)
LED Strip: Supported
Beeper: Yes
VTX protocol: Support DJI MSP(SmartAudio/RCTramp)/HDZero
UART1: 5
Uart: SPUART (UART1, UART2, UART4, UART7, UART8)
UART1: VTX HD / Analog
UART2: ESC Telemet
UART4: ELRS Receiver
UART7: GPS or other sensors that require a serial port
UART8: GPS or other sensors that require a serial port
VTX ON/OFF Mode Command:
resource PINIO 1 D10
set pinio_config = 1,1,1,1
set pinio_box = 40,41,255,255
set box_user_1_name = VTX_ON/OFF
aux 0 40 8 900 2100 0 0
save


Firmware:
Betaflight: iFLIGHT H743 AIO V2
Receiver Firmware: iFLIGHT 2.4GHz RX

Receiver Specification:
MCU: ESP8285
RF: SX1281
Receiver Type: 2.4GHz
Telemetry power: 100mW (20dBm)
LNA: Yes
Firmware: iFlight2.4GHz 2400 RX
Lua Script: iFlight2400RX
TCXO: Yes

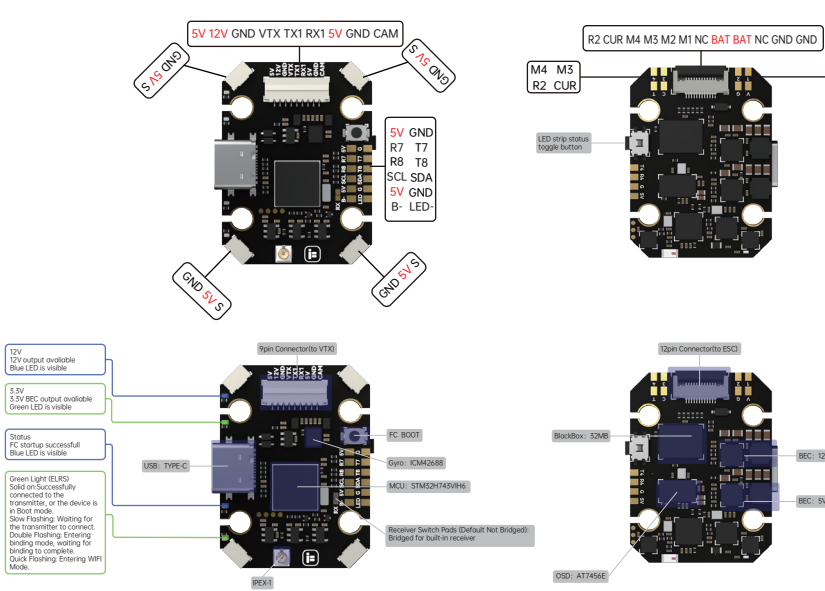

DJI Digital Transmitters: SUBS Protocol

Firmware Target: iFLIGHT H743 AIO V2

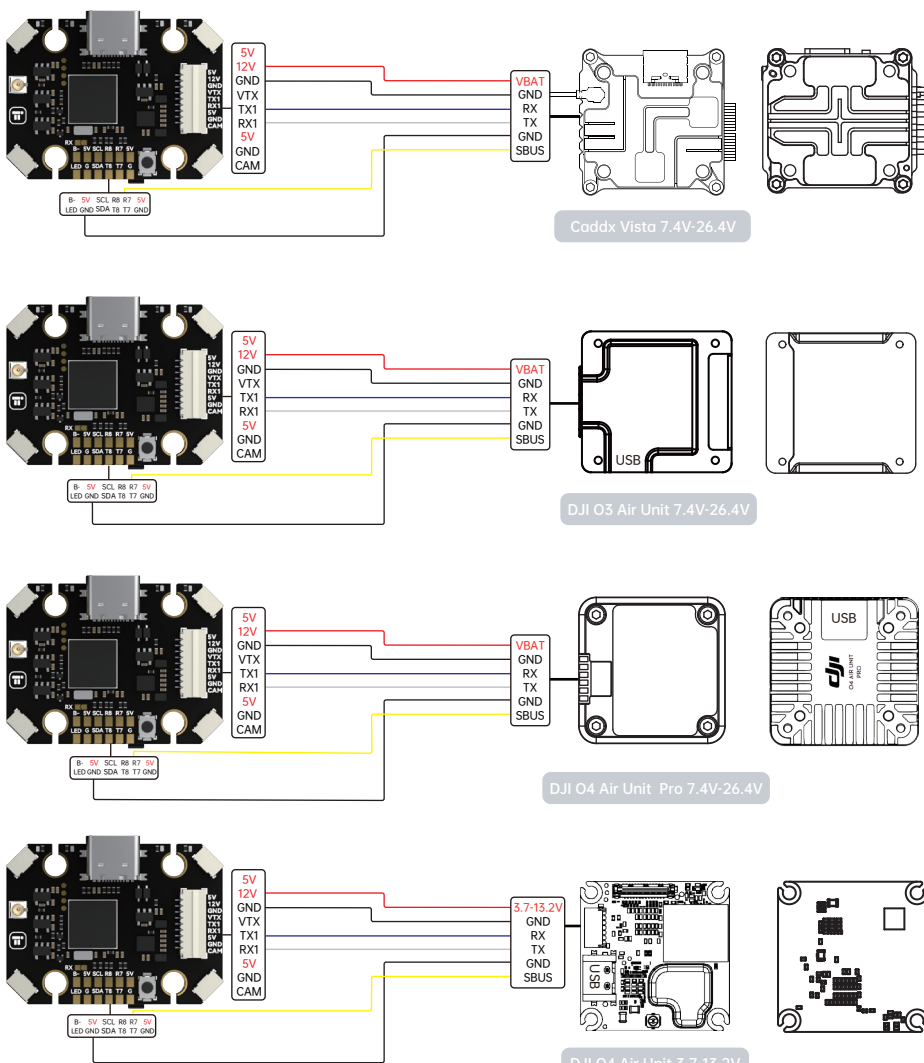


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
UART1	115200	1	Disabled	AUTO	Disabled
UART2	115200	2	Disabled	AUTO	Disabled
UART3	115200	3	Disabled	AUTO	Disabled
UART4	115200	4	Disabled	AUTO	Disabled
UART5	115200	5	Disabled	AUTO	Disabled
UART6	115200	6	Disabled	AUTO	Disabled

Receiver Mode: SUBS

- To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.
- note: DJI FPV Remote Controller2 is for DJI O3 Air Unit
DJI FPV Remote Controller is for DJI Air Unit and Vista
- Please check your protocols, otherwise your DJI Radio won't input signals!
DJI Goggle protocol and Betaflight protocol has to match!
For lower signal latency use the SUBS BAUD, FAST protocol option on both ends.
- For Betaflight Copy Paste"set sbus_baud_fast=on" into your Betaflight Configurator CLI then hit enter.
Use "save" and hit enter to save the changes.
Default: sbus_baud_fast=off, Goggle protocol set to NORMAL

Others Receivers(TBS/ELRS): CRSF Protocol

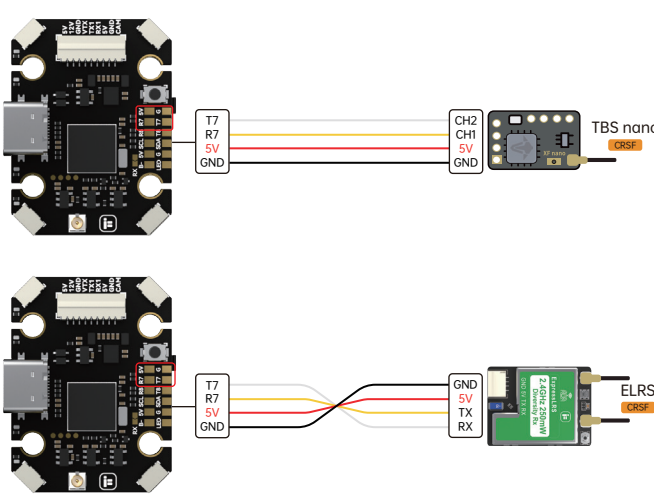


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
UART1	115200	1	Disabled	AUTO	Disabled
UART2	115200	2	Disabled	AUTO	Disabled
UART3	115200	3	Disabled	AUTO	Disabled
UART4	115200	4	Disabled	AUTO	Disabled
UART5	115200	5	Disabled	AUTO	Disabled
UART6	115200	6	Disabled	AUTO	Disabled

Receiver Mode: CRSF


Serial Receiver Provider: Serial Receiver Provider

Telemetry output: TELEMETRY

LED/BUZZER

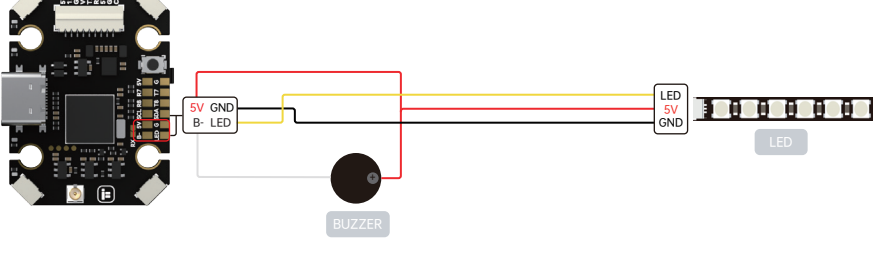


ESC


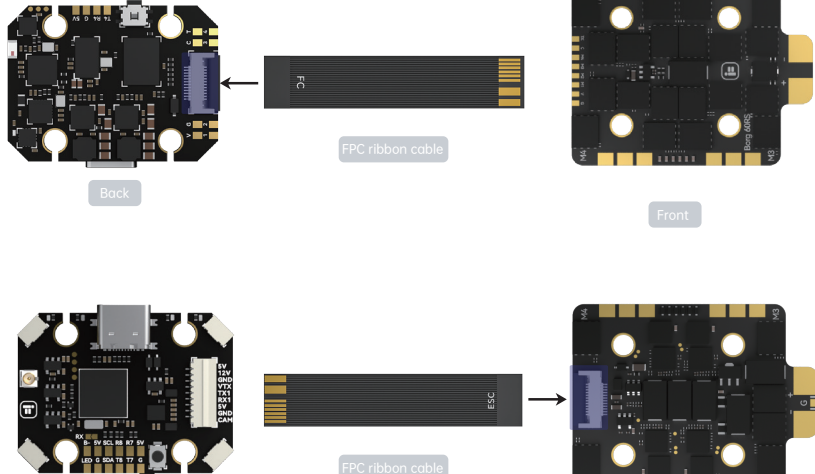


Note: If using an ESC from another brand, please ensure the wiring is connected correctly.

VTX/CAM

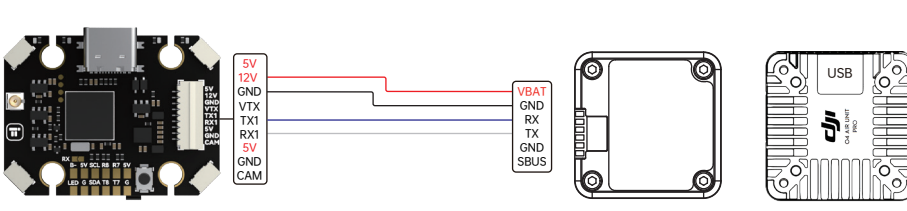

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
UART1	115200	1	Disabled	AUTO	Disabled
UART2	115200	2	Disabled	AUTO	Disabled
UART3	115200	3	Disabled	AUTO	Disabled
UART4	115200	4	Disabled	AUTO	Disabled
UART5	115200	5	Disabled	AUTO	Disabled
UART6	115200	6	Disabled	AUTO	Disabled

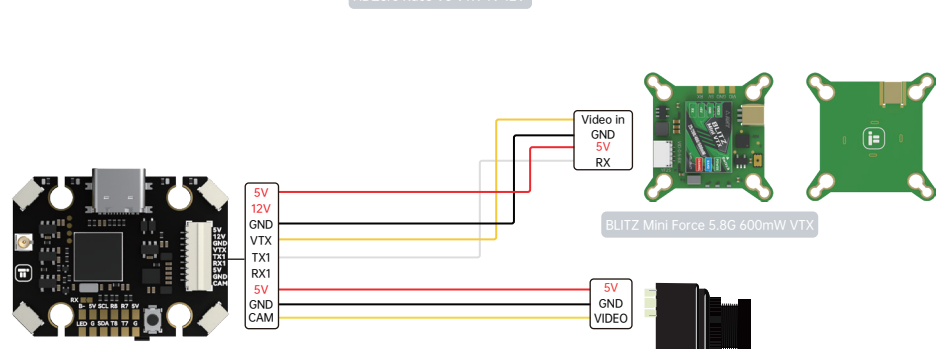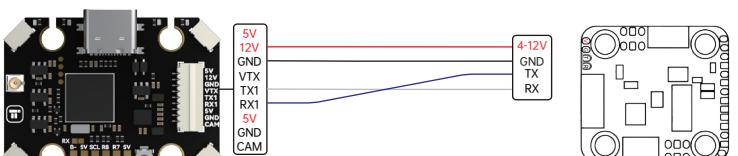

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
UART1	115200	1	Disabled	AUTO	Disabled
UART2	115200	2	Disabled	AUTO	Disabled
UART3	115200	3	Disabled	AUTO	Disabled
UART4	115200	4	Disabled	AUTO	Disabled
UART5	115200	5	Disabled	AUTO	Disabled
UART6	115200	6	Disabled	AUTO	Disabled

VTX_ON/OFF Mode On

VTX_ON/OFF Mode Off

VTX_ON/OFF Mode On


VTX_ON/OFF Mode Off

To control VTX on/off, please drag the range to 1600-2000. If the icon is yellow, it is on, and if it is gray, it is off.

Ref flashing firmware or restoring the default factory settings requires manually entering the following commands in Betaflight CLI to re-enable VTX switch control:

```
resource PINIO 1 D10
set pinio_config = 1,1,1,1
set pinio_box = 40,41,255,255
set box_user_1_name = VTX_ON/OFF
aux 0 40 8 900 2100 0 0
save
```

GPS

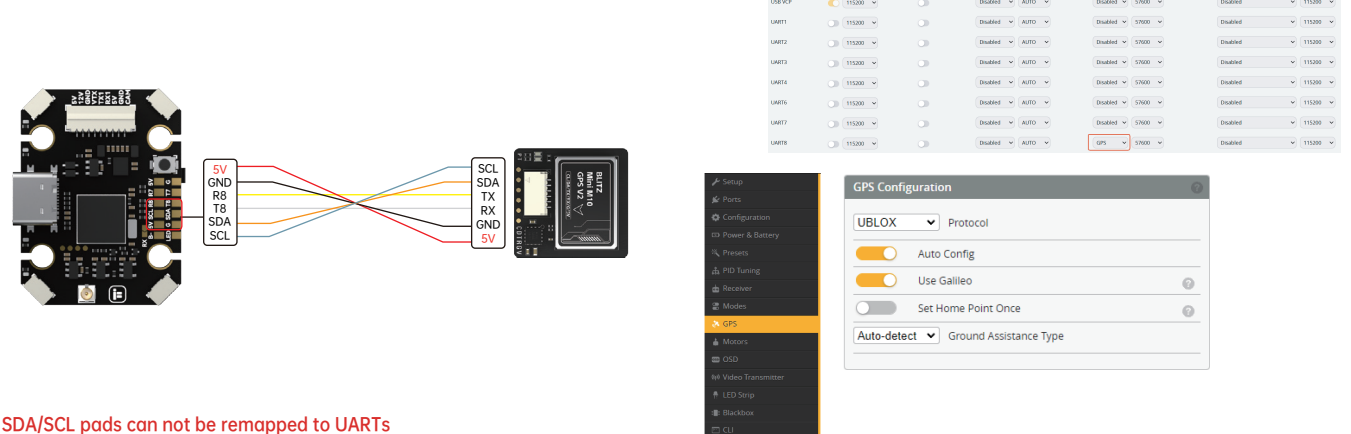

SDA/SCL pads can not be remapped to UARTs

Dimensions/Mounting pattern

